

TELEVISIO ENTERPRISES LIMITED

www.televisio.com.cn

HP PRINTER PARTS

CODE	MODEL	DESCRIPTION
HP 5L/6L		
RB1-7181	HP5L/6L	SEPARATION PAD KIT
RY7-5077	HP5L/6L	SEPARATION PAD KIT
RS5-2502	HP5L/6L	SPRING , FOR SEPARATION ARM
RB2-1634	HP5L/6L	PICKUP ROLLER
RB2-1699	HP5L/6L (HP4500)	PICKUP ROLLER
RG5-1951	HP5L/6L	PICKUP ROLLER ASS'Y
RG5-1964-FILM	HP5L/6L	FUSER FILM SLEEVE
RG5-1965-HEAT	HP5L/6L	HEATING ELMNENT (220V)
RG5-1964-HEAT	HP5L/6L	HEATING ELMNENT (110V)
RF5-1521	HP5L	DELIVERY ROLLER
RF5-2367	HP6L	DELIVERY ROLLER
N/A	HP6L	CLEANING BLADE
RF5-1516	HP5L (AX)	FUSER PRESSURE ROLLER (SLVD)
RF5-2364	HP6L (AX)	FUSER PRESSURE ROLLER (SLVD)
RF5-1534	HP5L/6L (AX)	TRANSFER ROLLER

RB1-7203	HP5L/6L (HP4500)	ARM , PRESSURE
RB2-7180-GEAR	HP6L	GEAR ASS'Y (EXIT ROLLER)
N/A	HP6L	MOTOR GEAR
HP 5P/6P		
RF5-0343	HP5P/6P	SEPARATION PAD
RG5-1700-FILM	HP5P/6P	FUSER FILM SLEEVE
RG5-2801-HEAT	HP5P/6P	HEATING ELMNENT (220V)
RG5-2800-HEAT	HP5P/6P	HEATING ELMNENT (110V)
RB1-6332	HP5P/6P	PICKUP ROLLER
RB1-2205	HP5P/6P	PICKUP ROLLER
RB1-9210	HP6P/VX	FUSER PRESSURE ROLLER (SLVD)
RB1-5910	HP5P , 5MP (VX)	FUSER PRESSURE ROLLER (SLVD)
RS5-0978	HP5P/6P	FUSER GEAR
RS5-0636	HP5P/6P	FUSER GEAR
RS5-0637	HP5P/6P	FUSER GEAR , PRESSURE ROLLER (24T)
RF5-1290	HP6P	TRANSFER ROLLER
RG5-0683	HP6P	DELIVERY ROLLER
RB1-9181	HP6P	EXIT ROLLER
RF5-0313	HP6P	GEAR,TRANSFER GEAR
HP 5000		
RF5-2435	HP5000	SEPARATION PAD , WITH SPRING TRAY 2
RF5-2400	HP5000	SEPARATION PAD-TRAY 1
RF5-2399	HP5000	PAD ASSEMBLY

RG9-1485	HP5000	SEPARATION PAD , WITH SPRING TRAY 2
RF5-3439	HP5000	SEPARATION PAD-TRAY 1
RB2-1984	HP5000	DELIVERY ROLLER
RB2-1821	HP5000	PICKUP ROLLER-TRAY 2
RB2-1820	HP5000	PICKUP ROLLER-TRAY 1
RF5-2636	HP5000	PICKUP ROLLER ASS'Y-500 SHEET
RF5-2409	HP5000	ARM , SWING
RS5-0348	HP5000	FUSER GEAR (29T/14T)
RB2-1919	HP5000	FUSER PRESSURE ROLLER (SLVD)
RG5-3530-FILM	HP5000	FUSER FILM SLEEVE
RG5-3529-HEAT	HP5000	HEATING ELEMENT (220V)
RG5-3528-HEAT	HP5000	HEATING ELEMENT (110V)
RG5-3579	HP5000	TRANSFER ROLLER
N/A	HP5100	FUSER FILM SLEEVE
HP 4000		
RG5-4283	HP4000	TRANSFER ROLLER
RB1-8773	HP4000	SEPARATION PAD
RF5-1885	HP4000	FEED/SEPARATION ROLLER
RB1-8865	HP4000	PICKUP ROLLER (D ROLLER) 500 SHEET
RG5-3718	HP4000	MP TRAY PICKUP ROLLER
RF5-2484	HP4000	PICKUP ROLLER ASS'Y-500 SHEET
RB1-8798	HP4000	UPPER DELIVERY ROLLER
RG5-2648-ROLLER	HP4000	LOWER DELIVERY ROLLER
RB1-8974	HP4000	CLUTCH , SEPARATION ROLLER

RB1-8811	HP4000	CAM DEFLECTOR
RB1-8794	HP4000	FUSER PRESSURE ROLLER (SLVD)
RS5-1297	HP4000	BUSHING , PRESSURE , RIGHT
RS5-1310	HP4000	BUSHING , PRESSURE , LEFT
RB1-8819	HP4000	FUSER SCREW
N/A	HP4000	GUIDE BLADE, fuser unite
FS5-0921	HP4000	FUSER GEAR (33T)
FS5-0922	HP4000	FUSER GEAR (34T)
RG5-2661-FILM	HP4000	FUSER FILM SLEEVE
RG5-2660-HEAT	HP4000	HEATING ELEMENT (220V)
RG5-2659-HEAT	HP4000	HEATING ELEMENT (110V)
HP4100		
RB1-2190	HP4100	CLIP , PICKUP
RG5-5068-FILM	HP4100	FUSER FILM SLEEVE
RB2-4919	HP4100/4050	FUSER PRESSURE ROLLER (SLVD)
RG5-5295	HP4100	TRANSFER ROLLER
RF5-3114	HP4100	FEED ROLLER
RB1-8957	HP4100	PICKUP ROLLER , REDESIGNED
RF5-3086	HP4100	SEPARATION PAD-TRAY 1
RG5-5281	HP4100	SEPARATION PAD , 3RD-PARTY
RS6-0688	HP4100	GEAR (33T)
RS6-0677	HP4100	GEAR (28T)
HP 4200/4300		

RU5-0018	HP4200	DELIVERY ROLLER
RM1-0036	HP4200	FEED ROLLER
RM1-0013-FM3	HP4200	FUSER FILM SLEEVE
N/A	HP4300	FUSER FILM SLEEVE
RL1-0007	HP4300	SEPARATION PAD
HP 4500/4550		
RB2-0717	HP4500/4550	PICKUP ROLLER
RF5-2490	HP4500/4550	FEED/SEPARATION ROLLER
RB2-0419	HP4500/4550	UPPER FUSER ROLLER
RB2-0420	HP4500/4550	FUSER PRESSURE ROLLER
RF5-2112	HP4500/4550	TRANSFER ROLLER
RB2-0734	HP4500	SEPARATION PAD
RF5-2110	HP4500	SEPARATION PAD , LIFT
RF5-2111	HP4500	SEPARATION PAD , RINGT
RF5-3750	HP4600	SEPARATION PAD
HP 2100		
RB2-2835	HP2100	SEPARATION PAD-TRAY 1
RB2-3008	HP2100	SEPARATION PAD-TRAY 2
RB2-2891	HP2100	PICKUP ROLLER-TRAY 2/3
RB2-2900	HP2100	PICKUP ROLLER-MP TRAY
RG5-4132-FILM	HP2100	FUSER FILM SLEEVE
RF5-2601	HP2100	FUSER PRESSURE ROLLER (SLVD)
RF5-2603	HP2100	DELIVERY ROLLER

RB1-2190	HP2100	CLIP , PICKUP
RG5-4156	HP2100	GEAR ASSEMBLY , DRIVE
RS6-0442	HP2100	GEAR (14T)
RS6-0443	HP2100	GEAR (15T)
RF5-4164	HP2100	TRANSFER ROLLER
HP 2200		
RG5-5560-FILM	HP2200	FUSER FILM SLEEVE
RB2-6368	HP2200	FUSER PRESSURE ROLLER
RG5-5581	HP2200	TRANSFER ROLLER
RB2-6304	HP2200	PICKUP ROLLER
RB9-0695	HP2200	SEPARATION PAD
RB2-6348	HP2200	SEPARATION PAD
RB2-6349	HP2200	SEPARATION PAD
RF5-3272	HP2200	SEPARATION PAD ASS'Y-TRAY 1
RB2-6254	HP2200	SEPARATION PAD HOLDER-TRAY 1
RB2-6372	HP2200	DELIVERY ROLLER
HP 2300 /2500		
RM1-0371	HP2300	DELIVERY ROLLER
RM1-0354-FM3	HP2300	FUSER FILM SLEEVE
RC1-0939	HP2300	SEPARATION PAD
N/A	HP2300	FUSER PRESSURE ROLLER
N/A	HP2300	PICKUP ROLLER
RF5-4012	HP2500	SEPARATION PAD

RB3-0160	HP2500	PICKUP ROLLER
RB3-0161	HP2500	PICKUP ROLLER
HP1100		
RF5-2832	HP1100	SEPARATION ARM
RY7-5050	HP1100	SUBPAD KIT
RF5-2886	HP1100	SEPARATION ARM
RB2-4026	HP1100	PICKUP ROLLER
RB2-3912	HP1100	FEED ROLLER
RB2-3949	HP1100	CAM
RG5-4585	HP1100	GEAR ASSEMBLY , DRIVE (37T/37T)
RF5-2830	HP1100	UPPER DELIVERY ROLLER
RF5-2822	HP1100	LOWER DELIVERY ROLLER
RF5-2823	HP1100	PRESSURE ROLLER (SLVD)
RG5-4589-FILM	HP1100	FUSER FILM SLEEVE
RG5-4590-HEAT	HP1100	HEATING ELEMENT (220V)
RG5-4589-HEAT	HP1100	HEATING ELEMENT (110V)
RG5-4657	HP1100	TRANSFER ROLLER
HP1000		
RF0-1014	HP1000	SEPARATION PAD
RF0-1008	HP1000	PICKUP ROLLER
RG5-1493-FILM	HP1000/1200	FUSER FILM SLEEVE
RF5-2824	HP1000/1200	FUSER PRESSURE ROLLER
RF0-1003	HP1000/1200	LOWER DELIVERY ROLLER

RF0-1114	HP1000/1200	UPPER DELIVERY ROLLER
RF0-1020	HP1000/1200	PICKUP GEAR (28T/28T)
RG9-1483	HP1000/1200	TRANSFER ROLLER
N/A	LPR1010	FUSER PRESSURE ROLLER
HP2/3/2D/3D/SX		
RA1-3968	HP2/3/SX	UPPER FUSER ROLLER
RS5-0020	HP2/3/SX	FUSER GEAR , HEAT ROLLER (32T)
RS1-0116	HP2/3/2D/3D	FUSER GEAR (20T)
RF1-0921	HP2/3/2D/3D/SX	ARM
RA1-3976	HP2/3/2D/3D (SX)	DELIVERY ROLLER
HP2P/3P		
RA1-7583	HP2P/3P (LX)	FUSER PRESSURE ROLLER
RA1-7708	HP2P/3P (LX)	DELIVERY ROLLER
RB1-0531	HP3SI/4SI (NX)	DELIVERY ROLLER
RB1-0818	HP3SI (NX)	CLIP , TRANSFER ROLLER
HP8000		
RB1-6606	HP8000	ROLLER , DELIVERY
RB1-6581	HP8000	ROLLER , DELIVERY
RB1-6686	HP8000 (5SI)	ROLLER , DELIVERY
RB1-6687	HP8000 (5SI)	ROLLER , DELIVERY
RF5-1834	HP8000/8100/8500	FEED/SEPARATION ROLLER
RF5-1835	HP8000/8100/8500	PICKUP ROLLER

RF5-2708	HP8000/8100/8500	PICKUP ROLLER-MP TRAY
RB1-6637	HP8000/5SI (WX)	BRACKET , RIGHT FOR UPGRADE KIT
RB1-6638	HP8000/5SI (WX)	BRACKET , LEFT FOR UPGRADE KIT
RB1-6647	HP8000/5SI (WX)	BUSHING , CLEANING ROLLER
RB2-3546-KIT	HP8000	CLEANING ROLLER KIT
RF5-1455	HP8000 (WX)	SEPARATION PAD
RS5-0748	HP8000 (WX)	FUSER GEAR (20T)
RS5-0749	HP8000 (WX)	FUSER GEAR (29T)
RS5-0751	HP8000 (WX)	FUSER GEAR (18T)
RB1-6623	HP8000/5SI (WX)	LOWER SLEEVED ROLLER
RB1-6622	HP8000/5SI (WX)	UPPER FUSER ROLLER
RB1-6730	HP8000/5SI (WX)	PICKUP ROLLER
RB1-6561	HP8000/5SI (WX)	ROLLER , PAPER FEED
RB1-6598	HP8000/5SI (WX)	ROLLER , PAPER FEED , UPPER
RF5-1412	HP8000/5SI (WX)	TRANSFER ROLLER
HP 8100		
RB2-3521	HP8100	UPPER FUSER ROLLER
RB2-3518	HP8100	FUSER GUIDE GEAR (3T)
RB1-9526	HP8100/8500	PICKUP ROLLER-MP TRAY
RF5-2490	HP8100	FEED/SEPARATION ROLLER
RF5-2708	HP8100	PICKUP ROLLER
RS6-0505	HP8100	FUSER GEAR (26T)
RS6-0507	HP8100	FUSER GEAR (54T)

RF5-2703	HP8100	SEPARATION PAD
RF9-1394	HP8100	TRANSFER ROLLER
N/A	HP8500/8550	SEPARATION PAD
RF5-3340	HP9000	PICKUP ROLLER
RF5-3338	HP9000	PICKUP ROLLER
RS6-0844	HP9000	FUSER GEAR
RG5-5662	HP9000	TRANSFER ROLLER
RF1-2505	LX	UPPER FUSER ROLLER
RA1-7674	LX	BYPASS PICKUP ROLLER
RG1-1912	LX	SEPARATION PAD
RF5-0081	NX	DUPLEX PICKUP ROLLER
RF5-0041	NX	PICKUP ROLLER
RS5-0057	NX	FUSER GEAR (23T)
RS5-0059	NX	FUSER GEAR (18T)
RS5-0062	NX	FUSER GEAR (33T)
N/A	NX	TRANSFER ROLLER
HP 4 SERIES		
RB1-2126	HP4	PICKUP ROLLER
RB1-3516	HP4+ (EX+)	UPPER FUSER ROLLER
RS5-0260	HP4+ (EX+)	TRANSFER ROLLER
RS5-0230	EX	FUSER GEAR (34T)
RB1-2264	HP4 , 4M (EX)	FUSER PRESSURE ROLLER (SLVD)
RB1-2632	HP4, EX	LOWER CASSETTE PICKUP ROLLER
RF5-1076	HP4	UPPER DELIVERY ROLLER

RF5-1077	HP4	LOWER DELIVERY ROLLER
RF5-0350	HP4	ARM , SWING
RB1-2263	HP4 (EX)	UPPER FUSER ROLLER
RF5-0349	HP4 (EX)	TRANSFER ROLLER
RB1-2127	HP4 (EX)	MP TRAY PICKUP ROLLER
RB1-2650	HP4+/4	PICKUP ROLLER
RB1-3477	HP4+/4	PICKUP ROLLER
RF5-0425	HP4+/4	ROLLER , HOLDER (4 REQ)
RB1-2299	HP4+/4	DELIVERY ROLLER (4 REQ'D)
RS5-0388	HP4+/4	FUSER GEAR , HEAT ROLLER (42T)
RS5-0393	HP4+/4	FUSER GEAR (23T)
RG5-0231	HP4+/4	FUSER GEAR (19T)
RS5-0230	HP4/4M	FUSER GEAR (34T)
RB1-3517	HP4+ (EX+)	FUSER PRESSURE ROLLER (SLVD)
RS6-0232	HP4/4M	FUSER GEAR (23T)
RF5-0302	HP4VC	SEPARATION PAD
RB1-1411	HP4VC	PICKUP ROLLER , MP TRAY
RS5-0182	HP4VC	GEAR (14T)
RB1-1443	HP4VC	LOWER SLEEVED ROLLER
RS5-0180	HP4VC	FUSER GEAR
RS5-0194	HP4VC	FUSER GEAR
RS5-0603	HP4VC	FUSER GEAR (39T)
RS5-0183	HP4V/4VC	GEAR (14T)
RS5-0184	HP4V/4VC	GEAR (18T)
RB1-5495	HP4VC	UPPER FUSER ROLLER

RG5-0198	HP4VC	FACE-DOWN DELIVERY ASSEMBLY
RB1-1386	HP4VC	DUAL PICKUP ROLLER
RG5-1410	HP4VC	TRANSFER ROLLER
RB1-2205	HP5	PICKUP ROLLER
RB1-7911	HP5	PICKUP ROLLER
RA1-3968	SX	UPPER FUSER ROLLER
RF1-1145	SX	SEPARATION PAD
RF1-0921	SX	ARM , SWING
RG1-0967	SX	DELIVERY COUPLER ASSEMBLY
RB1-5495	BX	UPPER FUSER ROLLER
RG5-0765-Gear	HP4L	MOTOR GEAR (18T)
RG5-0676-FILM	HP4L	FUSER FILM SLEEVE
RB1-3100	HP4L	FUSER PRESSURE ROLLER (SLVD)
RB1-3107	HP4L	
RB1-3103	HP4L	DELIVERY ROLLER
RB1-3029	HP4L	PICKUP ROLLER
RB1-3368	HP4L	PICKUP ROLLER
RF5-0596	HP4L	TRANSFER ROLLER

Email: info@televisio.com.cn